

S20 digital input and output module 8 inputs, 8 outputs

R911346604
Edition 02

Data sheet S20-DIDO-8/1

8 digital inputs, 8 digital outputs 500 mA
DC 24V
1-conductor technology

10 / 2022



1 Description

The module is designed for use within an S20 station. It is used to acquire and output digital signals. You can adjust the filter times of the inputs to increase noise immunity.

Filter times of 100 μ s enable you to implement a counter function with a maximum input frequency of 5 kHz in the application.

The outputs are protected against short circuit and overload.

Features

- 8 digital inputs in accordance with EN 61131-2 type 1 and type 3
- 24 V DC, 2.4 mA
- Connection of sensors in 1-conductor technology
- Filter times can be adjusted in three increments: < 100 μ s, 1000 μ s or 3000 μ s
- Maximum input frequency: 5 kHz
- 8 digital outputs
- 24 V DC, 500 mA

- Connection of actuators in 1-conductor technology
- Minimum update time of < 100 μ s
- Device rating plate stored

Valid from index AB1.



The deviating behavior of the modules with an earlier index is documented in the corresponding points.



This data sheet is only valid in association with the application description for the S20 system, material number R911335988.



Make sure you always use the latest documentation.

It can be downloaded under
www.boschrexroth.com/electrics.

2 Table of contents

1	Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	3
5	Maximum outputs power consumption when inductive loads are switched off	7
6	Internal circuit diagram	8
7	For your safety	8
	7.1 Intended use	8
	7.2 Qualification of users	8
	7.3 Electrical safety	8
	7.4 Installation	8
8	UL note	8
9	Terminal point assignment.....	9
10	Connection example.....	9
11	Local diagnostic and status indicators	10
12	Process data.....	12
13	Parameter, diagnostics and information (PDI)	12
14	Standard objects	13
	14.1 Objects for identification (device rating plate)	13
	14.2 Miscellaneous standard objects	14
	14.3 Diagnostics state (0018hex: DiagState).....	15
15	Application objects	17
	15.1 Substitute value behavior (FF8Dhex: PD Output Substitute Configuration)	17
	15.2 Filter time (FF8Fhex: Input_Filter)	17
16	Device descriptions	17

3 Ordering data


Description	Type	MNR	Pcs./Pkt.
S20 digital input and output module 8 inputs, 8 outputs	S20-DIDO-8/1	R911173745	1
Accessories	Type	MNR	Pcs./Pkt.
S20 bus base module, narrow	S20-BS-S	R911173203	5
Documentation	Type	MNR	Pcs./Pkt.
Application description S20: System and Installation	DOK-CONTRL- S20*SYS*INS-AP..-EN-P	R911335988	1
Application description S20: Error Messages	DOK-CONTRL- S20*DIAG*ER-AP..-EN-P	R911344826	1

Additional ordering data

For additional ordering data (accessories), please refer to the product catalog at www.boschrexroth.com/electrics.

4 Technical data

Dimensions (nominal sizes in mm)

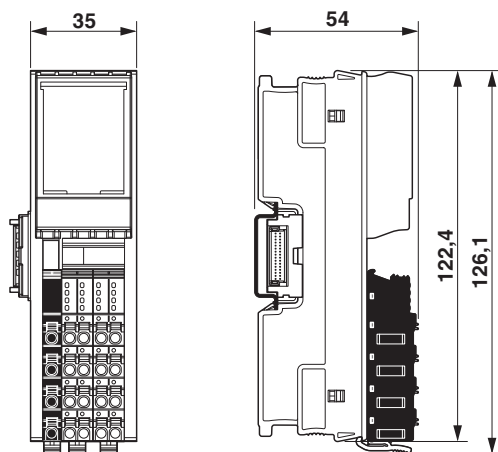

Width	35 mm
Height	126.1 mm
Depth	54 mm
Note on dimensions	The depth applies when a TH 35-7.5 DIN rail is used (in accordance with EN 60715).

General data

Color	light grey RAL 7035
Weight	133 g (with connectors and bus base module)
Ambient temperature (operation)	-25 °C ... 60 °C
Ambient temperature (storage/transport)	-40 °C ... 85 °C
Permissible humidity (operation)	5 % ... 95 % (non-condensing)
Permissible humidity (storage/transport)	5 % ... 95 % (non-condensing)
Air pressure (operation)	70 kPa ... 106 kPa (up to 3000 m above sea level)
Air pressure (storage/transport)	70 kPa ... 106 kPa (up to 3000 m above sea level)

General data

Degree of protection	IP20
Protection class	III (IEC 61140, EN 61140, VDE 0140-1)
Overvoltage category	II (IEC 60664-1, EN 60664-1)
Degree of pollution	2 (IEC 60664-1, EN 60664-1)
Mounting type	DIN rail mounting
Mounting position	any (no temperature derating)

Connection data: S20 connector

Connection method	Push-in connection
Conductor cross section, rigid	0.2 mm ² ... 1.5 mm ²
Conductor cross section, flexible	0.2 mm ² ... 1.5 mm ²
Conductor cross section [AWG]	24 ... 16
Stripping length	8 mm
Note	Observe the specifications for the conductor cross sections in the application description for the S20 system, material number R911335988.

Interface: Local bus

Number of interfaces	2
Connection method	Bus base module
Transmission speed	100 Mbps

Supply of the local bus (U_{Bus})

Supply voltage	5 V DC (via bus base module)
Current consumption	max. 120 mA (Index AA1) max. 60 mA (from index AB1)
Power consumption	max. 600 mW (Index AA1) max. 300 mW (from index AB1)

Supply for digital input and output modules (U_{IO})

Supply voltage	24 V DC
Supply voltage range	19.2 V DC ... 30 V DC (including all tolerances, including ripple)
Current consumption	typ. 20 mA (without connected peripherals) max. 4 A (provide external protection)
Power consumption	typ. 480 mW (without connected peripherals) max. 96 W (of which 1.35 W internal losses)
Surge protection	electronic (35 V, 0.5 s)
Reverse polarity protection	parallel diode; with external 5 A fuse (only for commissioning)
Protection	max. 8 A (polarity reversal protection up to 5 A)

NOTICE Damage to the electronics

Provide external protection for the module to ensure reverse polarity protection. If you use a fuse, the power supply unit must be capable of supplying four times the nominal current of the fuse. This ensures that the fuse trips reliably in the event of a fault.



When using the module for the first time, protect it with a 5 A fuse. When all modules in the system are correctly connected, the 5 A fuse can be replaced with an 8 A fuse. After that, you can load the module up to 8 A.

Loads over 8 A are not permitted.

Digital inputs

Number of inputs	8
Connection method	Push-in connection
Connection technology	1-conductor
Description of the input	EN 61131-2 types 1 and 3
Nominal input voltage	24 V DC
Nominal input current	2.4 mA
Current flow	linear until nominal current is reached, then constantly approx. 2.4 mA
Input voltage range "0" signal	-3 V DC ... 5 V DC
Input voltage range "1" signal	11 V DC ... 30 V DC
Input filter time	3000 µs (Default), 1000 µs, < 100 µs
Process data update	< 100 µs
Polarity reversal protection of the inputs	parallel diode (30 V, 5 s)

Digital outputs

Number of outputs	8
Connection method	Push-in connection
Connection technology	1-conductor
Nominal output voltage	24 V DC
Output current per channel	max. 500 mA
Output current of the device	4 A (provide external protection)
Nominal load, ohmic	max. 12 W (48 Ω, with nominal voltage)
Nominal load, inductive	max. 12 VA (1.2 H, 48 Ω, with nominal voltage)
Nominal load, lamp	max. 12 W (at nominal voltage)
Load min.	10 kΩ
Energy consumption	see diagram
Limitation of the voltage induced on circuit interruption	-25.8 V ... -15 V
Output voltage when switched off	max. 1 V
Output current when switched off	max. 300 µA
Signal delay	max. 100 µs (when switched on) max. 100 µs (when switched off, with at least 50 mA load current)
Switching frequency	max. 10000 per second (with at least 50 mA load current) max. 1 per second (with inductive load) max. 16 per second (with nominal lamp load)
Behavior with overload	Shutdown with automatic restart
Behavior with inductive overload	Output can be destroyed
Reverse voltage resistance to short pulses	limited protection up to 0.5 A for 1 s
NOTICE Damage to the electronics	
If there is a faulty external voltage (reverse voltage) at one of the outputs, the output may be destroyed. This may cause unintentional setting of further outputs.	
Overcurrent shut-down	as of 0.7 A
Output current with ground connection interrupt when switched off	< 1 mA
Process data update	< 100 µs
Short-circuit protection, overload protection of the outputs	electronic

Input and output address area

Input address area	1 Byte
Output address area	1 Byte

Configuration and parameter data in a PROFIBUS system

Required parameter data	3 Byte
Required configuration data	7 Byte

Electrical isolation/isolation of the voltage areas

Test section	Test voltage
5 V supply of the local bus (U_{BUS}) / 24 V supply (I/Os)	500 V AC, 50 Hz, 1 min.
5 V supply of the local bus (U_{BUS}) / functional ground	500 V AC, 50 Hz, 1 min.
24 V supply (I/O) / functional ground	500 V AC, 50 Hz, 1 min.

Mechanical tests

Vibration resistance in accordance with EN 60068-2-6/IEC 60068-2-6	5g
Shock in accordance with EN 60068-2-27/IEC 60068-2-27	30g
Continuous shock in accordance with EN 60068-2-27/IEC 60068-2-27	10g

Conformance with EMC Directive 2014/30/EU**Immunity test in accordance with EN 61000-6-2/IEC 61000-6-2**

Electrostatic discharge (ESD) EN 61000-4-2/IEC 61000-4-2	Criterion B, 6 kV contact discharge, 8 kV air discharge
Electromagnetic fields EN 61000-4-3/IEC 61000-4-3	Criterion A, Field intensity: 10 V/m
Fast transients (burst) EN 61000-4-4/IEC 61000-4-4	Criterion B, 2 kV
Transient overvoltage (surge) EN 61000-4-5/IEC 61000-4-5	Criterion B, DC supply lines: ± 0.5 kV/ ± 1.0 kV (symmetrical/ asymmetrical)
Conducted interference EN 61000-4-6/IEC 61000-4-6	Criterion A, Test voltage 10 V
Noise emission test in accordance with EN 61000-6-3/IEC 61000-6-3	Class B

Approvals

For the current approvals, please visit www.boschrexroth.com/electrics.


5 Maximum outputs power consumption when inductive loads are switched off



NOTICE Damage to the electronics

Restrict freewheeling voltage to a maximum of -17 V when using an external freewheeling circuit! The external freewheeling circuit does not function in the case of higher negative voltages.

Fig. 1 Maximum outputs power consumption when inductive loads are switched off

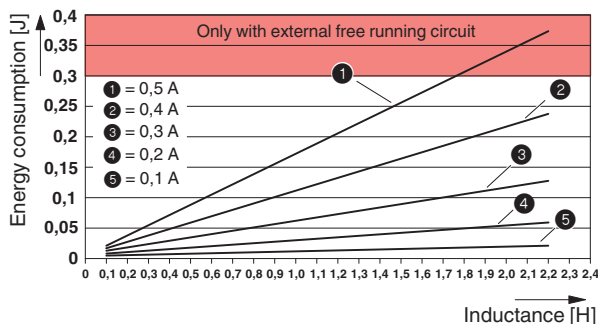


The specifications in the diagram refer to a maximum switching frequency of 1 Hz.

The diagram shows the maximum amount of energy that may be fed back into the corresponding output groups (outputs 1 to 4, 5 to 8) for each switch-off procedure when switching off an inductive load without external freewheeling circuit.

The current data refers to the ohmic DC voltage component of the inductive load.

6 Internal circuit diagram

Fig. 2 Internal wiring of the terminal points

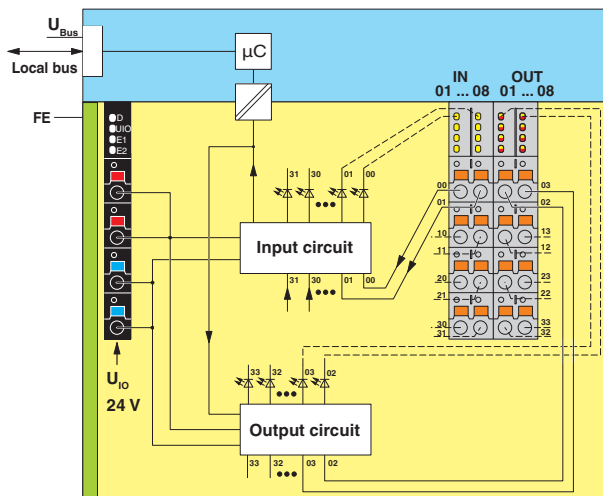

Key:

Local bus

Local bus

FE

 
Functional ground




Microcontroller



Electrical isolation



Input circuit

 

Output configuration



LED



Electrically isolated areas

7 For your safety

7.1 Intended use

Only use S20 modules in accordance with the information in this data sheet and in the application description for the S20 system, material number R911335988.

7.2 Qualification of users

The use of products described in this data sheet is oriented exclusively to electrically skilled persons or persons instructed by them. The users must be familiar with the relevant safety concepts of automation technology as well as applicable standards and other regulations.

7.3 Electrical safety



WARNING: loss of electrical safety

If used incorrectly, device safety may be impaired.

During installation, startup, and operation, observe the notes in this data sheet and the specifications in the application description for the S20 system, material number R911335988.

7.4 Installation

Only install the S20 modules in a control cabinet or junction box.

The enclosure must meet the requirements regarding the protection against spread of fire according to the following standards:


- EN 61010-1/IEC 61010-1
- UL 61010-1 (for applications with UL approval)

8 UL note

- Use copper conductors only.

9 Terminal point assignment


Fig. 3 Terminal point assignment

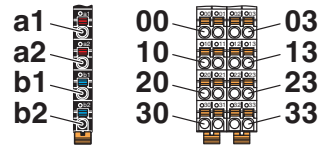

Terminal point	Color	Assignment	
Supply voltage input			
a1, a2	Red	24 V DC (U _{IO})	Supply for digital input and output modules (bridged internally)
b1, b2	Blue	GND	Reference potential of the supply voltage (bridged internally)
Digital inputs			
00, 01, 10, 11	Orange	IN01 ... IN04	Digital inputs 1 ... 4
20, 21, 30, 31	Orange	IN05 ... IN08	Digital inputs 5 ... 8
Digital outputs			
02, 03, 12, 13	Orange	OUT01 ... OUT04	Digital outputs 1 ... 4
22, 23, 32, 33	Orange	OUT05 ... OUT08	Digital outputs 5 ... 8

10 Connection example

Fig. 4 Typical connection of sensors and actuators when using external busbars

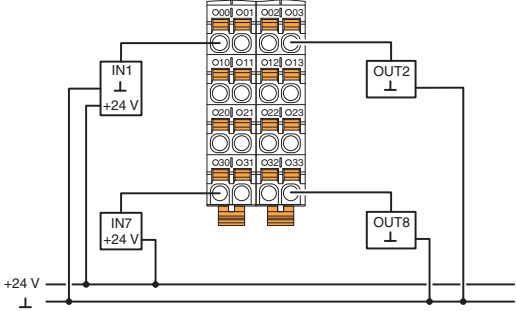


Ensure that GND of the sensors and actuators and GND for U_{IO} have the same potential.

11 Local diagnostic and status indicators

From index AB1

Fig. 5 Local diagnostic and status indicators

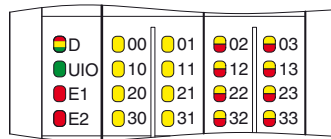

Channel errors are errors that can be associated with a channel.

I/O errors are errors that affect the entire module.


Designation	Color	Meaning	State	Description
D	Red/ yellow/ green	Diagnostics of local bus communication		
		Run	Green on	The device is ready for operation, communication within the station is OK. All data is valid. An error has not occurred.
		Active	Flashing green	The device is ready to operate, communication within the station is OK. The data is not valid. The controller or higher-level network is not delivering valid data. There is no error on the module.
		Device application not active	Flashing green/yellow	The device is ready for operation, communication within the station is OK. Output data cannot be outputted and/or input data cannot be read. There is a fault on the periphery side of the module..
		Ready	Yellow on	The device is ready for operation but did not detect a valid cycle after power-up.
		Connected	Flashing yellow	The device is not (yet) part of the active configuration.
		Reset	Red on	The device is ready for operation but has lost the connection to the bus head.
		Not connected	Flashing red	The device is ready for operation but there is no connection to the previously existing device.
		Power down	Off	Device is in (power) reset.
UIO	Green	U _{input/output}	On	Supply for digital input and output modules is present.
			Off	Supply for digital input and output modules is not present.
E1	Red	I/O error	On	I/O error present.
			Off	No I/O error.
E2	Red	Channel error	On	Channel error present.
			Off	Channel error not present.
00, 01, 10, 11, 20, 21, 30, 31	Yellow	Status of the inputs	On	Input is set.
			Off	Input is not set.
02, 03, 12, 13, 22, 23, 32, 33	Red/ yellow	Diagnostics / Status of the outputs	Red on	Short-circuit/overload of the output.
			Yellow on	Output is set.
			Off	No error, output is not set.

Deviating behavior for index AA1

The LED E2 is not present.

The LEDs for the outputs only display the status.

Fig. 6 Local diagnostic and status indicators

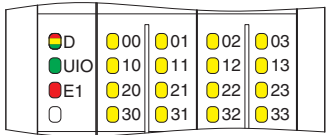

Designation	Color	Meaning	State	Description
E1	Red	I/O error	On	Short-circuit/overload of an output
			Off	No I/O error.
02, 03, 12, 13, 22, 23, 32, 33	Yellow	Status of the outputs	Yellow on	Output is set.
			Off	Output is not set.

12 Process data

The process data is mapped in Motorola format (Big Endian).

OUT process data

Byte	0							
Bit	7	6	5	4	3	2	1	0
Signal	OUT 08	OUT 07	OUT 06	OUT 05	OUT 04	OUT 03	OUT 02	OUT 01
Terminal point	33	32	23	22	13	12	03	02

IN process data

Byte	0							
Bit	7	6	5	4	3	2	1	0
Signal	IN08	IN07	IN06	IN05	IN04	IN03	IN02	IN01
Terminal point	31	30	21	20	11	10	01	00

13 Parameter, diagnostics and information (PDI)

Parameter and diagnostic data as well as other information is transmitted as objects via the PDI channel of the S20 station.

In IndraWorks, these parameters are displayed in the configurator.

The standard and application objects stored in the module are described in the following section.

The following applies to all tables below:

For an explanation of the data types, please refer to the application description for the S20 system, material number R911335988.

Abbreviation	Meaning
A	Number of elements
L	Length of the elements in bytes
R	Read
W	Write



Each visible string is terminated with a null terminator (00_{hex}). The length of a visible-string-type element is therefore at least one byte larger than the number of user data items.

If the number of user data items plus null terminator is smaller than the specified length of the element, the visible string will be populated with a null character (00_{hex}).



For detailed information on PDI objects, please refer to the application description for the S20 system, material number R911335988.

14 Standard objects

14.1 Objects for identification (device rating plate)

From index AB1

Index (hex)	Object name	Data type	A	L	Rights	Meaning	Contents
Manufacturer							
0001	VendorName	Visible String	1	32	R	Vendor name	Bosch Rexroth AG
0002	VendorID	Visible String	1	7	R	Vendor ID	006034
0012	VendorURL	Visible String	1	58	R	Vendor URL	http://www.boschrexroth.com
Module - general							
0004	DeviceFamily	Visible String	1	19	R	Device family	I/O digital IN-OUT
0006	ProductFamily	Visible String	1	32	R	Product family	IndraControl S20
000E	CommProfile	Visible String	1	4	R	Communication profile	633
000F	DeviceProfile	Visible String	1	5	R	Device profile	0010
0011	ProfileVersion	Record of Visible Strings	2	11; 21	R	Profile version	2011-12-07; Basic - Profile V2.0
0017	Language	Record of Visible Strings	2	6; 8	R	Language	en-us; English
Module - special							
0005	Capabilities	Visible String	1	8	R	Capabilities	Nothing
0007	ProductName	Visible String	1	32	R	Product name	S20-DIDO-8/1
0008	SerialNo	Visible String	1	22	R	Serial number	xx xx xx xx xx xx x (e. g., 7602012346BC125)
0009	ProductText	Visible String	1	58	R	Product text	8 digital input channels, 8 digital output channels
000A	OrderNumber	Visible String	1	32	R	Item No.	R911173745
000B	HardwareVersion	Record of Visible Strings	2	11; 11	R	Hardware version	e.g., 2020-04-26; AA1
000C	FirmwareVersion	Record of Visible Strings	2	11; 11	R	Firmware version	e.g., 2017-12-31; 1.00
000D	PChVersion	Record of Visible Strings	2	11; 6	R	PDI version	e. g., 2010-06-21; V1.00
0037	DeviceType	Octet string	1	8	R	Device type	00 C0 00 01 00 00 00 DD _{hex}
003A	VersionCount	Array of UINT16	4	4 * 2	R	Version counter	e.g., 0007 0001 0001 0001 _{hex}
Use of the device							
0014	Location	Visible String	1	58	R/W	Location	Can be completed by the user.
0015	EquipmentIdent	Visible String	1	58	R/W	Equipment identifier	Can be completed by the user.
0016	ApplDeviceAddr	UINT16	1	2	R/W	Application-specific device address	Can be completed by the user.

Deviating behavior for index AA1

Index (hex)	Object name	Data type	A	L	Rights	Meaning	Contents
Manufacturer							
0001	VendorName	Visible String	1	17	R	Vendor name	Bosch Rexroth AG
0012	VendorURL	Visible String	1	28	R	Vendor URL	http://www.boschrexroth.com
Module - general							
0006	ProductFamily	Visible String	1	17	R	Product family	IndraControl S20
0011	ProfileVersion	Record of Visible Strings	2	11; 20	R	Profile version	2011-12-07; Basis - Profil V2.0
003A	VersionCount	Array of UINT16	4	4 * 2	R	Version counter	e.g., 0007 0001 0000 0000 _{hex}
Module - special							
0007	ProductName	Visible String	1	13	R	Product name	S20-DIDO-8/1
0008	SerialNo	Visible String	1	16	R	Serial number	xx xx xx xx xx xx x (e. g., 7602012346BC125)
0009	ProductText	Visible String	1	52	R	Product text	8 digital input channels, 8 digital output channels
000A	OrderNumber	Visible String	1	11	R	Item No.	R911173745
000B	HardwareVersion	Record of Visible Strings	2	11; 4	R	Hardware version	e.g., 2020-04-26; AA1
000C	FirmwareVersion	Record of Visible Strings	2	11; 3	R	Firmware version	0000-00-00; --

14.2 Miscellaneous standard objects

Index (hex)	Object name	Data type	A	L	Rights	Meaning/contents
Diagnostics objects						
0018	DiagState	Record	6	58	R	Diagnostic state *
Objects for process data management						
0025	PDIN	Octet string	1	1	R	Input process data The structure corresponds to the representation in the "Process data" section.
0026	PDOUT	Octet string	1	1	R	OUT process data The structure corresponds to the representation in the "Process data" section.

The objects identified with * in the last column are described in more detail in the following sections.

The description of the other objects is to be found in the application description for the S20 system, material number R911335988.

14.3 Diagnostics state (0018_{hex}: DiagState)

This object is used for a structured message of an error.

From index AB1

0018 _{hex} : Diagnostics state (read)					
Subindex	Data type	Length in bytes	Meaning	Contents	
0	Record	58	Diagnostic state	Complete diagnostics information	
1	UINT16	2	Error number	0 ... 65535 _{dec}	
2	UINT8	1	Priority	00 _{hex}	No error
				01 _{hex}	Error
				02 _{hex}	Warning
				81 _{hex}	Error removed
				82 _{hex}	Warning eliminated
3	UINT8	1	Channel/group/module	00 _{hex}	No error
				01 _{hex}	Channel 1 (OUT01)
				...	...
				08 _{hex}	Channel 8 (OUT08)
				FF _{hex}	Entire device
4	UINT16	2	Error code	See table below	
5	UINT8	1	More follows	00 _{hex}	
6	Visible String	51	Text	See table below	

 The message with priority 81_{hex} or 82_{hex} is a one-off, internal message to the bus coupler. The bus coupler transfers this error message to the error mechanisms of the higher-level system.

 After the error has been eliminated, it is automatically reset.

Error and status of the local diagnostics and status indicators

Subindex	2	3	4	6	LED				
Error	Pri- ority	Channel/ group/ module	Error code	Text					
	hex	hex	hex		D	UIO	E1	E2	xx
No error	00	00	0000	Status OK	●	●	○	○	○
Short-circuit/overload of an output	02	##	2344	Overload / short circuit DO##, terminal point \$\$	●	●	○	●	●
Failure of the supply for digital input and output modules (U _{IO})	01	FF	3400	Missing I/O supply UIO, terminal point a1/a2, b1/b2	✱	○	●	○	○

Channel number
 \$\$ Terminal point number
 ○ Off
 ● On

xx LED
 xx
 ●
 ●
 ✱

Diagnostics of the output
 02, 03, 12, 13, 22, 23, 32, 33
 Green on
 Red on
 Flashing green/yellow

Deviating behavior for index AA1

0018 _{hex} : Diagnostics state (read)					
Subindex	Data type	Length in bytes	Meaning	Contents	
0	Record	8	Diagnostic state	Complete diagnostics information	
1	UINT16	2	Error number	0 ... 65535 _{dec}	
2	UINT8	1	Priority	00 _{hex}	No error
				01 _{hex}	Error
				02 _{hex}	Warning
				81 _{hex}	Error removed
				82 _{hex}	Warning eliminated
3	UINT8	1	Channel/group/module	00 _{hex}	No error
				FF _{hex}	Entire device
4	UINT16	2	Error code	See table below	
5	UINT8	1	More follows	00 _{hex}	
6	Visible String	1	Text	00 _{hex}	

Error and status of the local diagnostics and status indicators

Subindex	2	3	4			
Error	Priority	Channel/ group/ module	Error code	LED		
	hex	hex	hex	D	UIO	E1
No error	00	00	0000	●	●	○
Short-circuit/overload of an output	02	00	2344	●	●	●
I/O supply failure	01	FF	3400	✱	○	○



Off



On



Green on



Red on



Flashing green/yellow

15 Application objects

In the case of valid parameters, the parameterization is stored in the module permanently.

Index (hex)	Object name	Data type	A	L	Rights	Meaning/contents
FF8D	PD Output Substitute Configuration	UINT8	1	1	R/W	Substitute value behavior
FF8F	Input_Filter	UINT8	1	1	R/W	Filter time

15.1 Substitute value behavior (FF8D_{hex}: PD Output Substitute Configuration)

With this object, you parameterize the behavior of the module so that an application reset can be detected if necessary.

FF8D _{hex} : Substitute value behavior (read, write)				
Subindex	Data type	Length in bytes	Contents	
0	UINT8	1	00 _{hex} (Default)	Set outputs to 0
			01 _{hex}	Hold last value

15.2 Filter time (FF8F_{hex}: Input_Filter)

You parameterize the filter time of the module with this object.

FF8F _{hex} : Input_Filter (read, write)				
Subindex	Data type	Length in bytes	Contents	
0	UINT8	1	00 _{hex} (Default)	3000 µs
			01 _{hex}	1000 µs
			02 _{hex}	< 100 µs

16 Device descriptions

The device is described in the device description files.

These files are available for download at www.boschrexroth.com/electrics in the download area of the bus coupler used.