


End Plates for ST 5/XH-FR, ST 5/H-FR

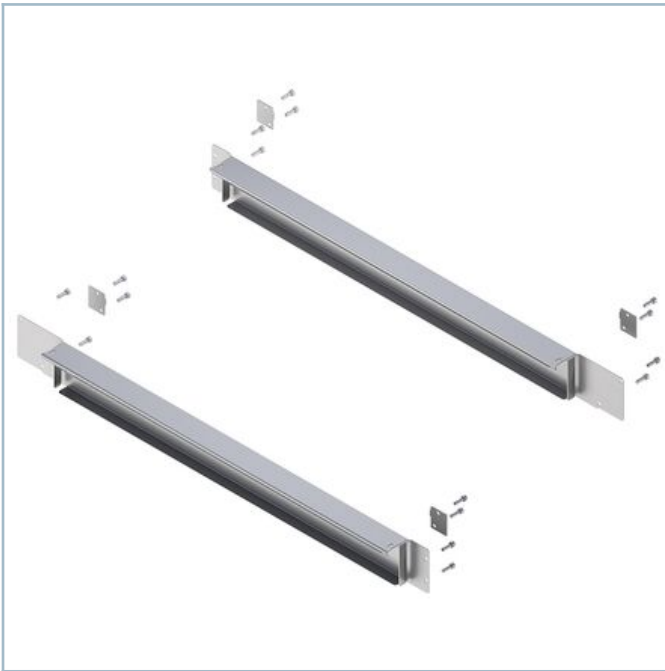

- The protective covers and end plates are provided in working areas to increase safety
 - They can be ordered separately for conveyor units; for curves, diverters, and junctions they are optionally included in the scope of delivery (SC = 2)
 - The protective covers and end plates are clipped between the rollers using spring elements
 - **Note:** Do not walk on the protective covers or end plates
-
- Protective covers for various widths and roller spacings
 - Special covers for conveyor section center, transitions, and ends
 - **End plates**
 - End plate, left drive side (**D**)
 - End plate, right drive side (**E**)
 - Lateral guide cover
 - Lateral guide protective cover (**F**), 2x required
 - **Thread forming screw**
 - Screw (**G**), 4 required for each end plate (**D/E**) and 2 for each lateral guide cover (**F**)
-
- Spring element
 - Spring element (**H**), 2x required for each end plate
 - Caps
 - cover cap for the open profile ends (**J**), 2x required for each section end


Product description

Conveyor unit selection

Technical data

No.	Material
3842545659	Galvanized steel
3842545660	
3842545661	
3842545662	
3842545663	
3842545664	
3842545665	
3842545666	
3842545667	
3842545468	
3842545469	
3842545668	
3842545669	
3842545670	
3842545671	
3842545672	
3842545673	
3842545674	
3842545675	
3842545676	
3842545677	
3842545466	
3842545467	
3842545678	
3842545276	
3842563978	
3842545214	
3842548795	PP
3842548757	

Ordering codes

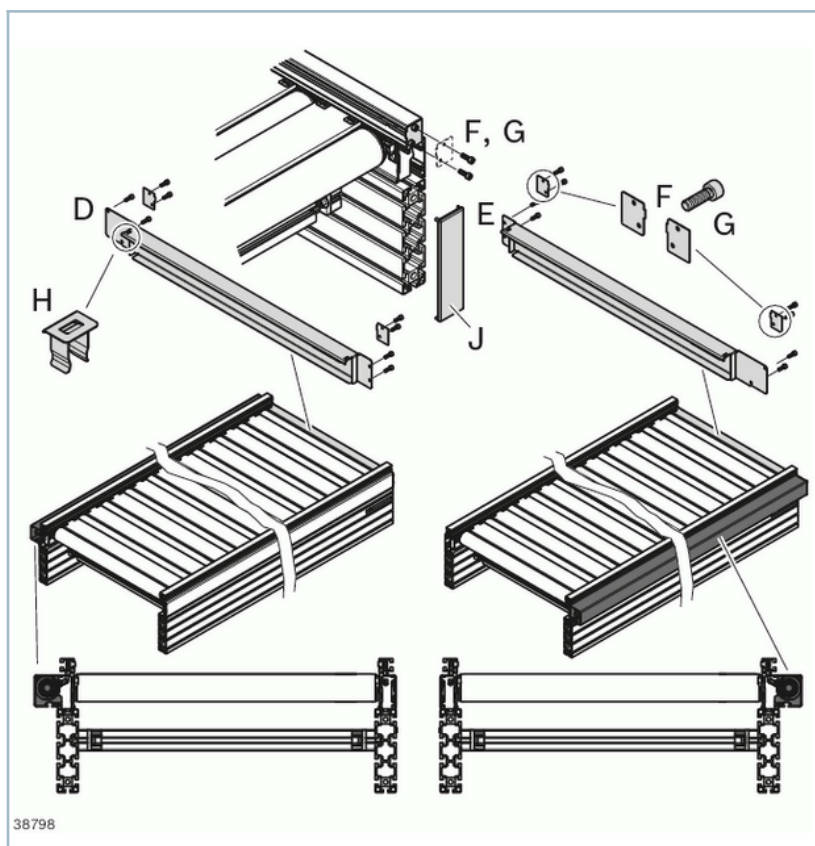

	b ¹⁾	p ²⁾		ESD	No.
	mm	mm			
ST5/XH-FR, ST5/H-FR end plate; AS on left 455/130	455	130			3842545659
ST5/XH-FR, ST5/H-FR end plate; AS on left 455/195	455	195			3842545660
ST5/XH-FR, ST5/H-FR end plate; AS on left 650/130	650	130			3842545661
ST5/XH-FR, ST5/H-FR end plate; AS on left 650/195	650	195			3842545662
ST5/XH-FR, ST5/H-FR end plate; AS on left 650/260	650	260			3842545663
ST5/XH-FR, ST5/H-FR end plate; AS on left 845/130	845	130			3842545664
ST5/XH-FR, ST5/H-FR end plate; AS on left 845/195	845	195			3842545665
ST5/XH-FR, ST5/H-FR end plate; AS on left 845/260	845	260			3842545666
ST5/XH-FR, ST5/H-FR end plate; AS on left 845/325	845	325			3842545667
ST5/XH-FR, ST5/H-FR end plate; AS on left 1040/130	1040	130			3842545468
ST5/XH-FR, ST5/H-FR end plate; AS on left 1040/195	1040	195			3842545469
ST5/XH-FR, ST5/H-FR end plate; AS on left 1040/260	1040	260			3842545668
ST5/XH-FR, ST5/H-FR end plate; AS on right 455/130	455	130			3842545669
ST5/XH-FR, ST5/H-FR end plate; AS on right 455/195	455	195			3842545670
ST5/XH-FR, ST5/H-FR end plate; AS on right 650/130	650	130			3842545671
ST5/XH-FR, ST5/H-FR end plate; AS on right 650/195	650	195			3842545672
ST5/XH-FR, ST5/H-FR end plate; AS on right 650/260	650	260			3842545673
ST5/XH-FR, ST5/H-FR end plate; AS on right 845/130	845	130			3842545674
ST5/XH-FR, ST5/H-FR end plate; AS on right 845/195	845	195			3842545675
ST5/XH-FR, ST5/H-FR end plate; AS on right 845/260	845	260			3842545676
ST5/XH-FR, ST5/H-FR end plate; AS on right 845/325	845	325			3842545677
ST5/XH-FR, ST5/H-FR end plate; AS on right 1040/130	1040	130			3842545466
ST5/XH-FR, ST5/H-FR end plate; AS on right 1040/195	1040	195			3842545467

	b ¹⁾	p ²⁾		ESD	No.
	mm	mm			
ST5/XH-FR, ST5/H-FR end plate; AS on right 1040/260	1040	260			3842545678
Lateral guide cover			2		3842545276
Thread forming screws for end plates			100		3842563978
Spring element			50		3842545214
Cover cap 45x180, black			20		3842548795
Cover cap 45x90, black			20		3842548757

1) b = track width

2) p = roller spacing