 


EcoFlow stop gates and return stops

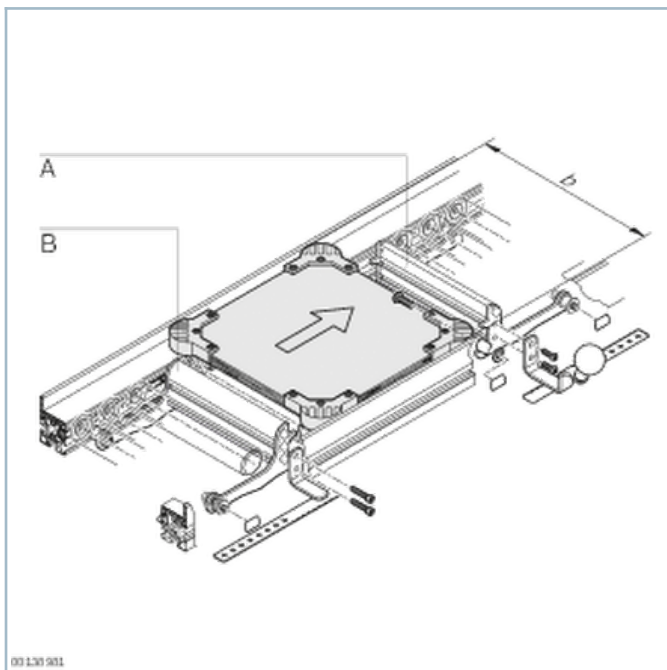

 
 
- Stop gate and return stop for positioning workpiece pallets or containers
- At the planning stage remember to leave sufficient leg room. The stop gate and return stop extend downwards by an additional 45 mm
- We recommend using a workpiece pallet with corner pieces to provide a defined stopping mechanism

Delivery notes

Condition of Delivery

Delivered as components (pre-assembled)

Ordering codes

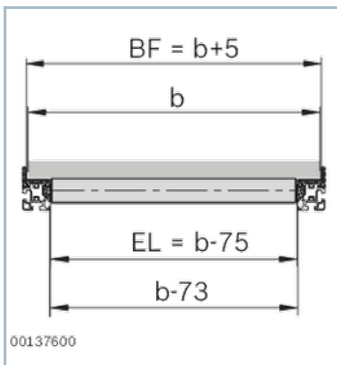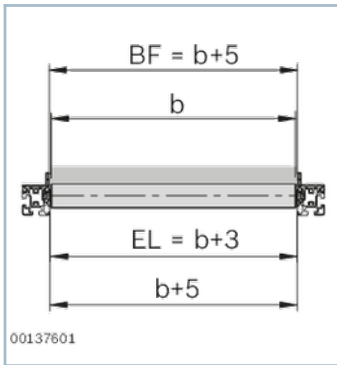

	EL	No.
	mm	
Stop gates EL = 225	225	3842537894
Stop gates EL = 325	325	3842537895
Stop gates EL = 425	425	3842537896
Stop gates EL = 525	525	3842537897
Return stops EL = 225	225	3842537898
Return stops EL = 325	325	3842537899
Return stops EL = 425	425	3842537900
Return stops EL = 525	525	3842537901
Stop gates EL = 105...1005	105 ... 1005	3842995007
Return stops EL = 105...1005	105 ... 1005	3842995017