
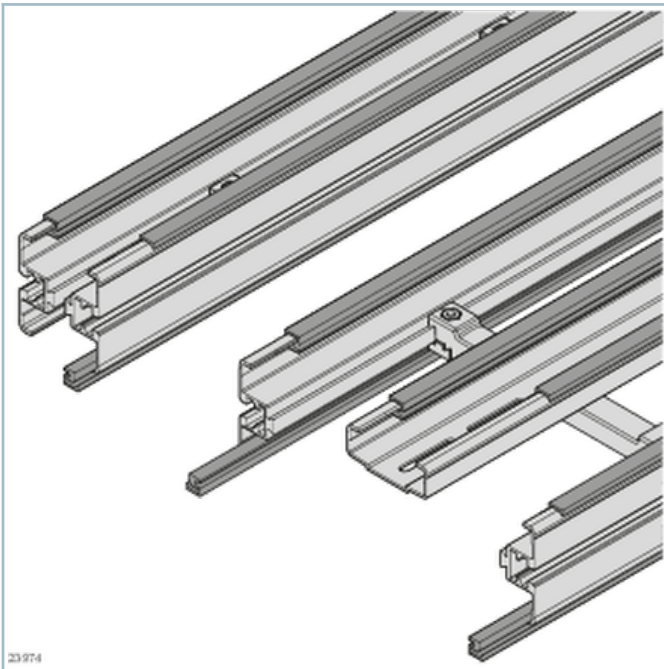


Slide rail



- Easy assembly - simply clip onto the section profile
- Secured against axial shifting due to lateral bolting

- Gliding surface machining: not required
- Material
 - for Premium, Advanced slide rails: FDA CFR 21
 - for Basic slide rails: EU 10/2011, FDA CFR 21
- One cross-section for all AL and STS section profiles

Product description


The slide rail is clipped into the section profile and guides the conveyor chain.

Lateral securing means the sliding surface does not need to be machined. Abrasion and noise levels are thus reduced to a minimum.

Three slide rails with different main areas of application are available:

- Basic: straight sections and curve wheels, $v_{\max}$ 60 m/min
- Advanced: sections with sliding curves, $v_{\max}$ 60 m/min, clean room
- Premium: sections with sliding curves, $v_{\max}$ 100 m/min, clean room

Extend the slide rail over the component interfaces to ensure minimum wear and noise emissions. Interruptions to the profile or component connection must be avoided. If an interruption is necessary after 10 m, the slide rail must be attached laterally with a sheet metal screw (A).

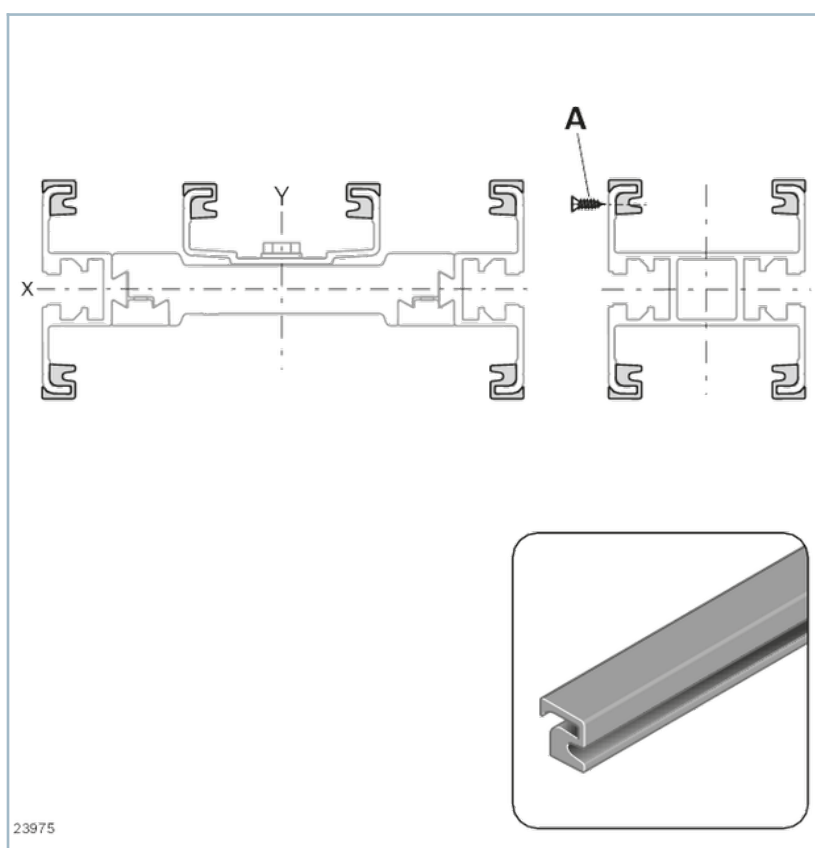


Technical data

	Material
Slide rail VFplus Premium	PE-UHMW
Slide rail VFplus Advanced	
Slide rail VFplus Basic	
Sheet metal screw	

Information

Note: After the sliding curves, an interruption is provided as an expansion joint in the inner curve area.

Accessories

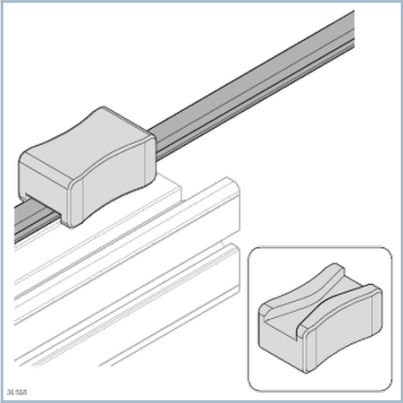

Slide rail assembly tool

- Assembly tool to easily and effortlessly clip the slide rail into the section profile

Ordering codes

	L		No.
	mm		
Slide rail VFplus Premium	30000	1	3842546116
Slide rail VFplus Advanced	30000	1	3842549727
Slide rail VFplus Basic	30000	1	3842549730
Sheet metal screw		100	3842547908